PROGRAM: FOOD SAFETY, PRODUCT INTEGRITY AND MEAT SCIENCE



Fact sheet – What is electrical stimulation?

Date of issue: 27 January 2015

This is the first fact sheet in a series of three fact sheets about electrical stimulation.

Background

Electrical stimulation enhances meat quality by improving tenderness and meat colour by effectively controlling the rate of pH decline of a carcase postslaughter.

What is electrical stimulation?

Electrical stimulation involves passing an electric current through a carcase which causes the muscles to contract or twitch. These muscle contractions burn up the remaining - glycogen energy left in the muscle more quickly, creating lactic acid and dropping the pH more rapidly.

Even with rapid carcase chilling, pH 6 can be reached before the temperature reaches the range where there is a danger of cold shortening. Electrically stimulated muscles will reach a pH6 at a higher temperature than unstimulated carcases.

Why are carcases electrically stimulated?

Electrical stimulation was developed to accelerate post-mortem glycolysis, so that when muscle entered rigor excessive muscle shortening and toughness (cold shortening) was avoided.

Research by the Sheep CRC has indicated that most lamb carcases in Australia undergo a fast chilling regime and thus to comply with the pH/temperature window, electrical stimulation is required. Cold shortened carcases do not look different, even to an experienced butcher. Therefore it is difficult to stop affected carcasses passing through trading channels and giving consumers unnecessarily tough meat.

pH and temperature decline

The muscle pH of a carcase declines post slaughter from 7.2 to about 5.5 due to the conversion of glycogen (muscle energy source) to lactic acid.

If the pH decline is too slow by remaining high while the temperature of the carcase falls, cold shortening will occur (Fig 1).

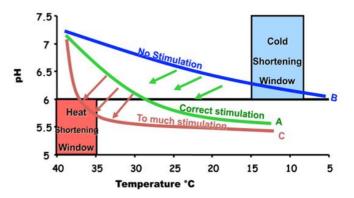


Figure 1: Graph showing the optimum 'window' of pH and temperature decline after slaughter (Path A). Carcases suffer 'cold shortening' if their temperatures drop below 12°C before the pH has reached 6.0 (path B). Conversely they suffer 'heat toughening' if their pH drops under 6.0 while they are still above 35°C (Path C)

Cold shortening occurs when the muscles react to the cold and tighten into an irreversible contraction before rigor occurs. It causes extremely tough meat (described as inedible) and may also be darker.

Heat toughening is the deactivation of the tenderizing enzymes which reduces ageing potential of the meat making it tougher after extended ageing. It is caused by slow rates of cooling and fast pH decline.

The eating quality window

The ideal 'window' is a specification used to describe the relationship between pH and temperature fall during chilling and the objective is to manipulate pH fall so it passes through the window.

PROGRAM: FOOD SAFETY, PRODUCT INTEGRITY AND MEAT SCIENCE



The Sheep CRC and Meat and Livestock Australia research has found hitting this window can significantly affect sheepmeat eating quality.

Hitting this window can shorten the ageing time of meat to reach consumer acceptable tenderness, reduce the variation in tenderness and enhance meat colour.

How pH-temperature decline is measured

The rate of decline is commonly expressed in terms of the temperature at which the loin muscle of the carcase reaches pH 6 (Temp@pH6). Temperature and pH readings are taken at timed intervals using a combined pH/temperature meter during chilling. The data obtained is then used to calculate a rate of pH by temperature decline from which it is possible to predict the temperature at pH6.

Standard loin measurement is taken at the lumbarsacral junction, where overlaying fat is cut away to prevent fouling of the pH electrode.

Optimal eating quality

Processors participating in the Meat Standards Australia (MSA) sheepmeat program are required to measure and control systems to achieve compliance with the pH-temperature guidelines (Table 1).

It is difficult to hit the window without methods to either slow the temperature decline (compromising food safety) or speed up pH decline.

Table 1: pH Temperature guidelines for sheep meat

Ageing Period	Hanging system	Required Temp@pH6
Short: 5 days (domestic product)	Achilles hung	18-35°C
Short: 5 days (domestic product)	Tender stretch/ pelvic hung	8-35°C
Longer ageing period 10+ days	Achilles hung	8-35°C

There is a large variation in lamb tenderness across Australia, measured by shear force (Fig 2 ■)

On average, only 14% of carcases achieve targets of pH 6 between 18-35 °C.

Stimulated carcases, aged for 5 days (Fig 2 ■) are more tender, with 90% of carcases meeting the pH/temperature target.

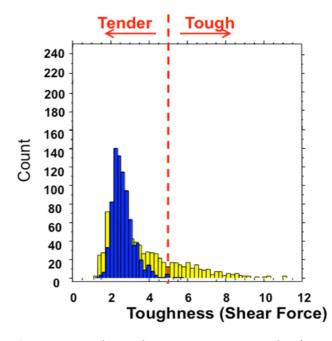


Figure 2. Lamb tenderness across Australia (1997-1998): Normal Variation ($_$), Stimulated carcases, aged for 5 days (\blacksquare).

Key Messages

- Using electrical stimulation optimises the rate of pH and temperature decline and improves sheepmeat eating quality.
- Meat Standards Australia (MSA) for sheepmeat requires meat processors to measure and control systems to 'hit' the pH temperature window.

Further information

- AMPC Factsheet: Types of Electrical Stimulation
- AMPC Factsheet: Optimising Electrical Stimulation.

PROGRAM: FOOD SAFETY, PRODUCT INTEGRITY AND MEAT SCIENCE







Disclaimer

The information contained within this publication has been prepared by a third party commissioned by the Australian Meat Processor Corporation Ltd (AMPC). It does not necessarily reflect the opinion or position of AMPC. Care is taken to ensure the accuracy of the information contained in this publication. However, AMPC cannot accept responsibility for the accuracy or completeness of the information or opinions contained in this publication, nor does it endorse or adopt the information contained in this report. No part of this work may be reproduced, copied, published, communicated or adapted in any form or by any means (electronic or otherwise) without the express written permission of Australian Meat Processor Corporation Ltd. All rights are expressly reserved. Requests for further authorisation should be directed to the Chief Executive Officer, AMPC, Suite 1, Level 5, 110 Walker Street Sydney NSW.